



CERTILAM LAMES ISOLEES

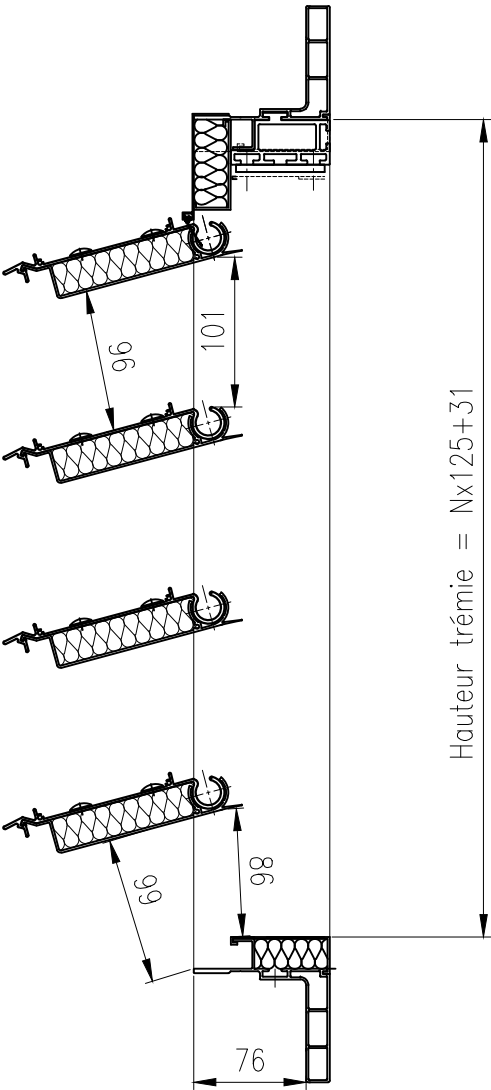


SLC= HPA x LPA
HPA = [(Nb Lames - 1) x 96] + 86
LPA = Largeur trémie

CERTILAM LAMES STANDARD

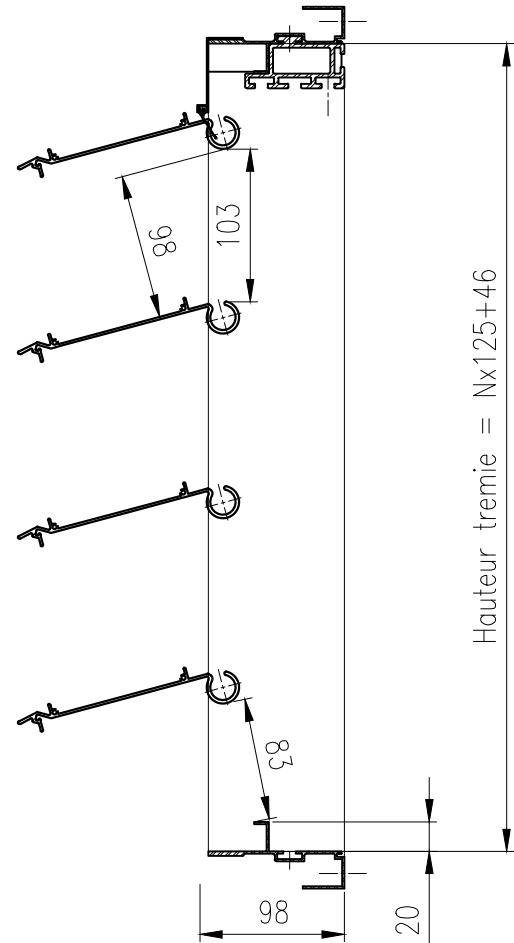

SLC= HPA x LPA
HPA = [(Nb Lames - 1) x 98] + 83
LPA = Largeur trémie - 40

CERTILUX LAMES 10 MM

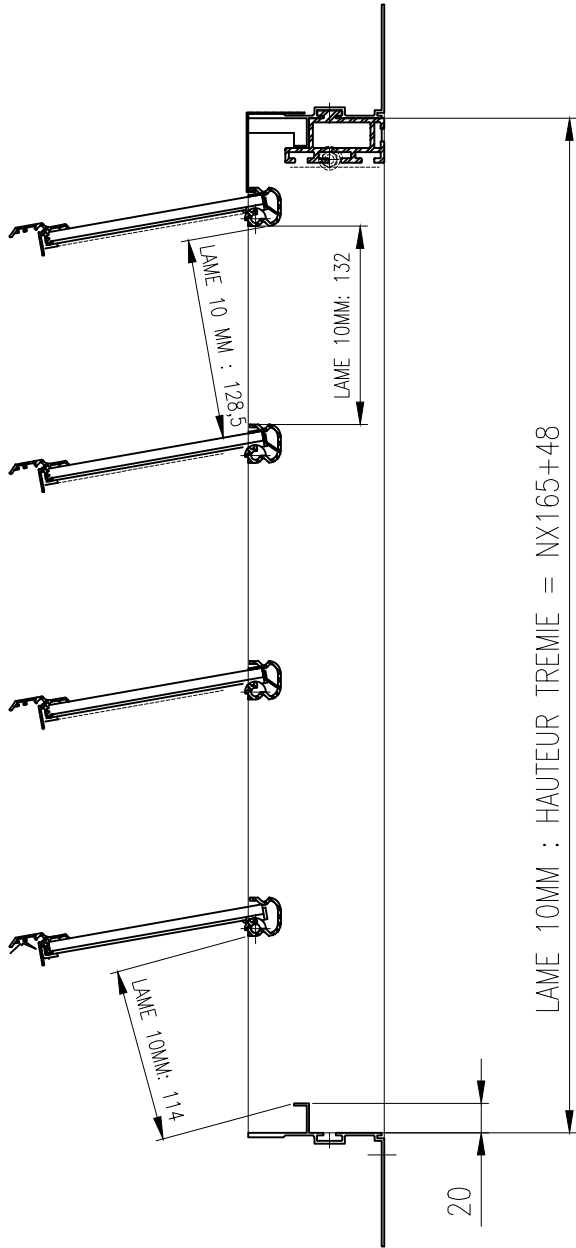

LAME 10MM:
SLC= HPA x LPA
HPA = [(Nb Lames - 1) x 128.5] + 114
LPA = Largeur trémie - 40